

# **OPERATING INSTRUCTIONS** VARIMANT-1 VARIMANT-2

**ULV- Applicator for weed control** in areas of specialised cultivation such as nurseries, orchards and vineyards, ornamental plant and vegetable gardens, as well as agricultural, forestry, communal and non-cultivated lands.

> The unit has been developed for the *undiluted* application of ROUNDUP® products (Glyphosate).

### **Important:**

Before application, carefully read the usage instructions for the unit and the plant protective agent! Observe safety instructions!

For questions regarding plant protective agents, consult the manufacturer! Observe the requirements and regional regulations for the use of herbicides and, if necessary, obtain approval from the responsible authorities (e.g. environmental conservation agency)! Application is to be performed only by a competent user.

### Remarks about usage of the unit:

**Settings:** This system is not suitable for the application of water. Use herbicides for testing the spray action and calibration of the flow rate.



Keep the applicator and pesticides out of the reach of children.

Noise emission from the unit equates to less than 70 dB(A).

Manufacturer:

Mantis ULV-Sprühgeräte GmbH

D-21502 Geesthacht, Telephone + 49 (0)4152 / 8459-0, Internet: www.mantis-ulv.eu

Vierlander Str. 11 a FAX + 49 (0)4152 / 8459-11 E-Mail: mantis@mantis-ulv.eu

### USER SAFETY RECOMMENDATIONS

- Always observe the safety recommendations for user protection in the "directions for use" of the chemical and wear the recommended personal protective equipment.
- Do not eat, smoke or drink when working with pesticides.
- Dispose of excess pesticide mix and rinse in accordance with label instructions.
- Always keep pesticides and applicators out of the reach of children.
- After use, thoroughly clean the applicator.

The atomiser is powered by the vehicle electrical system. The fluid metering is handled by a metering pump. The droplets are formed by the centrifugal force of the atomiser and discharged downwards through an adjustable segment. Flow rate can be affected by temperature fluctuations, therefore the flow rate specified in the calibration table has to be checked and adjusted as required. Check the atomiser daily to be sure it is clean and operating smoothly. The spray hood should pass closely over the top of the area to be treated. Switch off the atomiser at the end of the treatment.

#### **CAUTION**

Before lifting the spray hood switch off the system.

Set the Spray band of the atomiser by adjusting the spray limiters (see drawing). The spray band should be set so that the droplets are discharged across the entire compartment width. Fill the tank. Find a clean dry surface, preferably a concrete base, or place a cardboard panel under the spray hood and check the coverage on the panel. Adjust as required and recheck. Be sure you understand all the functions of the applicator before starting treatment.

#### **VARIMANT**

#### **Assembly Instruction**

- A. Mount sprayer to front of tractor
- B. Set height of sprayboom
- C. Connect electrical plug into 12 V socket of the tractor
- D. Adjust spray width of atomizers (see drawing)

#### Caution:

If the plug is removed:


blue lead is - (minus)

brown lead is + (plus)

Check atomiser disc direction of rotation

#### **Checking the Flow Rate**

- 1. Fill tank with chemical solution
- 2. Fit screw cap with cock and filter onto container
- 3. Set metering knob to suggested letter (A-H). Refer to table.
- 4. Disconnect hose coupling
- Collect fluid in the metric measuring cup for 1 minute.
- 6. Check table and (if required) adjust metering knob to obtain desired flow rate.
- 7. Repeat steps 5 & 6 (if necessary)

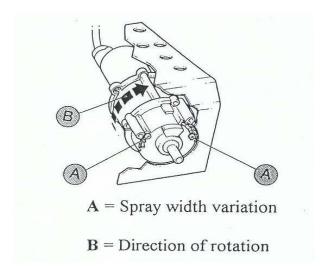

### VARIMANT Calibration Instruction for Roundup - undiluted -

### Dosing pump Mafex -3 Piston for VARIMANT-1

km/h	m/min.	l/ha	nominal value ml/min.	pump calibration
		1	3,4	В
4	67	1,5	5	С
		2	6,8	E
		2	5	С
6	100	3	7,5	F
		4	10	1
		2	6,8	Е
8	134	3	10	I
		4	13,4	L

#### pump calibration km/h nominal value ml/min. m/min. l/ha 3,4 Α 67 1,5 С 5 2 6,8 D С 1,5 Ε 6 100 7,5 2 10 Н 1 8,25 G 1,5 10 166

Dosing pump Mankar -3 Piston for VARIMANT-2

The discharge quantity may vary depending on different operating conditions. Therefore users are advised to check the nominal discharge rate with regard to the individual operating conditions and to correct the dosage table, if necessary.

#### **CLEANING**

Clean VARIMANT at least every evening after use.


- Remove cap with tube and filter from the chemical container.
  - Immerse the filter in a container with tap water.
- 2. Set metering knob to maximum delivery and switch machine "ON".

Run machine until the plastic tubes are free of chemical and only clean chemical issues from the atomisers.




2


## **VARIMANT-1** and **VARIMANT-2**

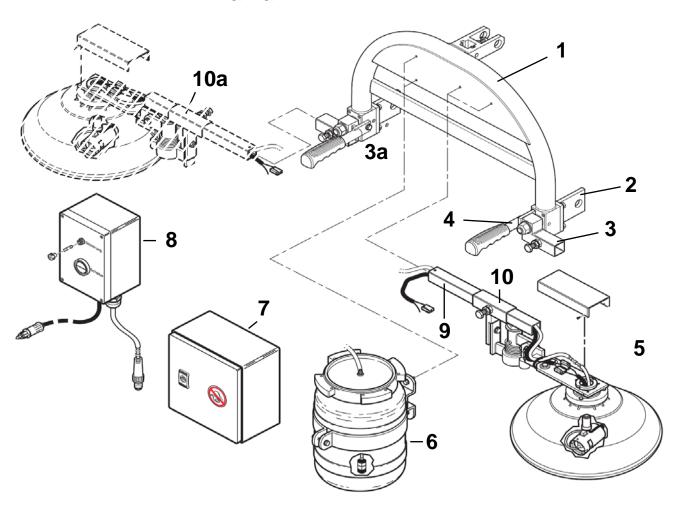


### Item Part No. Description

1	101797	3-point hitch for VARIMANT/FLEXOMANT
2	101541	Lower link for 3-point hitch VARIMANT/FLEXOMANT
3	100676	Swivel VARIMANT, left side
3a	101550	Swivel VARIMANT, right side
4	100677	Adjustment with handhold
5	101265	Spray hood arm (K) 36 cm Version: plastics with atomizer
6	100589	Tank subassembly, consisting of:Tank 6L, tank holder, lid and filter for VARIMANT
7	100582	Pump unit MANKAR-3 DC/DC, Capacity 2 x 5 - 12 ml/min
8	102224	Control box with 1 switch, without converter for VARIMANT
9	100671	Extension arm VARIMANT
10	101789	Width adjustment, left side
10a	101790	Width adjustment, right side

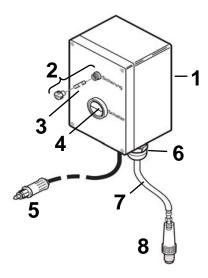

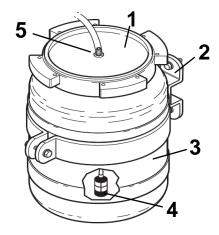

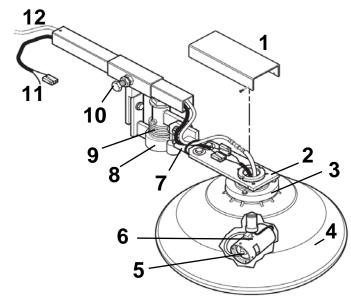

### Item Part No. Description

Housing, steel, 200x200x155mm, for control box and pump box

1	101534	Connection box, grey, Typ 1002, WINNER
2	100365	Fuse holder complete
3	100730	Fuse T3.15 Amp
4	101564	Switch with control light
5	100121	Screwed cable gland PG 7, plastic
6	100069	E-cable with 2-core plug
7	101548	Lead 2 x 1,00 mm <sup>2</sup> , sold by metre
8	101532	Plug, 7poles

### Item Part No. Description


Tank subassembly, consisting of:Tank 6L, tank holder, lid and filter for VARIMANT


1	100625	Tank lid for 6 litre tank
2	100623	Tank holder for 6 litre tank
3	100624	Tank, 6 litre
4	100281	Filter MINI-MANTRA
5	100085	Hose stem

### Item Part No. Description

101265 Spray hood arm (K) 36 cm Version: plastics with atomizer

	1	100672	Covering sheet
	2	100673	Swinging arm for spray hood VARIMANT / FLEXOMANT
	3 1005		Cover for ball bearing
	4	101175	Spray hood 36 cm Ø for VARIMANT
	5	100320	Segmental Atomiser for MANKAR
	6	100619	Atomiser protective tube
	7	101655	Flange for pivot
	8	101825	Pivot for VARIMANT
	9	100674	Spring 4 mm for pivot VARIMANT / FLEXOMANT
1	10	101134	Hexagon screw M 10 x 30 mm galvanized
1	11	101536	Lead GS/BL 2 x 0,75
1	12	100885	Tube PVC- , 4 x 2 mm, sold by metre

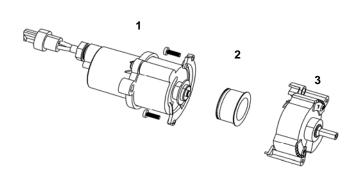

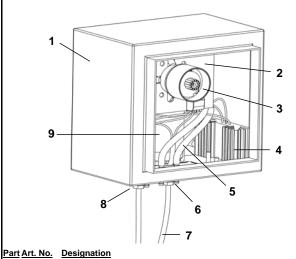


#### Part Art. No. Designation

#### 100320 Atomiser for MANKAR

100515 Pump unit MAFEX-3 DC/DC Capacity 2-20 ml/min 100582 Pump unit MANKER-3 DC/DC Capacity 2 x 5-12 ml/min

1 102417 Motor module for segmental atomiser MANKAR	1 100977 Housing, steel, 200x200x155mm
2 100478 Atomiser disc for herbicide atomiser	2 102285 Fitting panel for MANKAR pumps
3 101996 Segment module for segmental atomiser	a 102284 Fitting panel for MAFEX pumps
	3 100522 Dosing pump MANKAR-3, capacity 5 - 10 ml/min
	3a 101565 Dosing pump MAFEX-3, capacity 2 - 20 ml/min
	4 100667 Converter 12V to 6V
	5 101284 Tube PVC-, 4x2mm 20cm
	6 100085 hose stem
	7 101536 Lead GS/BL 2x0,75
	8 100121 Screwed cable gland PG 7, plastic
	9 100177 Pump motor 12V with Hall-sensor

with

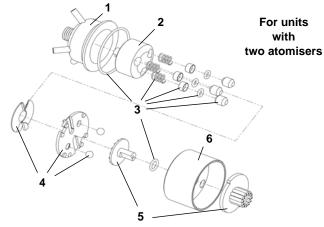


Part Art. No. Designation


### 100522 Metering pump MANKAR-3, capacity 5 - 10 ml/min

100528 Housing, pump housing, MS for MANKAR

2	100138	Rotor-3, MS for piston pumps MAFEX / MANKAR	2	100138	Rotor-3, MS for piston pumps MAFEX / MA
3	102373	Sealing set for MANKAR/MAFEX-3	3	102372	Sealing set for MAFEX-3
4	101626	Repair set, MANKAR metering pump, pressure plate/wobble plate	4	102436	Repair set, MAFEX metering pump, pressu
5	102429	Repair set, MANKAR metering pump, metering adjustment knob/selector disc	5	102437	Repair set, MAFEX metering pump, meter
6	100534	Cover for piston pump	6	100534	Cover for piston pump
			•		

Dosierpumpe MANKAR Metering pump MANKAR Pompe doseuse MANKAR

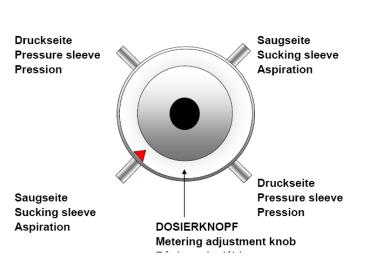

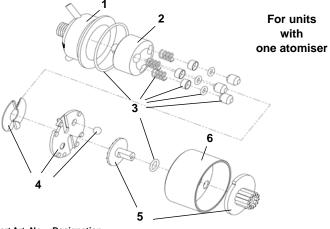


Part Art. No. Designation

### 100492 Metering pump MAFEX-3, capacity 2 - 20 ml/min 100493 Housing, pump housing, MS for MAFEX

102372	Sealing set for MAFEX-3
102436	Repair set, MAFEX metering pump, pressure plate/wobble plate
102437	Repair set, MAFEX metering pump, metering adjustment knob/selector disc
100534	Cover for piston pump

### **Dosierpumpe MAFEX** Metering pump MAFEX Pompe doseuse MAFEX

### Druckseite / Pressure sleeve / Pression

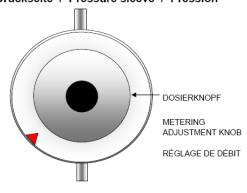

Saugseite Sucking sleeve

#### **GUARANTEE**

The manufacturer guarantees that in accordance with the present state of technology the article of purchase is free from defects as regards raw materials and construction. Guarantee is valid for all machines and apparatus for 24 months. The period of guarantee begins from the date of purchase by the user.

The manufacturer will decide to repair or replace faulty parts or issue a credit note.

Parts damaged due to normal wear and tear will not be replaced under guarantee. Carriage costs are bourne by the manufacturer for faulty goods.

Unresolved claims do not entitle purchaser to withhold payments or set them against non-approved claims. Parts not manufactured by manufacturer are guaranteed by the original manufacturer under their terms. Warranty claims must be submitted in writing within 4 weeks of the damage being seen.

Repairs will carried out with original manufacturer spare parts by an approved dealer.

Acknowledgement of a claim by manufacturer is binding only when a written notice is issued. Unless the manufacturer cannot make a repair, there is no right to cancellation of orders or to mitigation.

Compensation for direct or indirect damage will not be given.

Guarantee terminates if the article of purchase is altered by manipulation of third parties or by installing spare parts of extraneous origin and if the ascertained damage is directly caused thereby. Guarantee also terminates if orderer does not observe the operating instructions. Guarantee does neither apply to natural wear, to damage caused during storage or by corrosion, nor to damage caused by negligent or improper handling. Guarantee does not apply to used machines or apparatus.

The operation instruction published by the manufacturer has been carefully prepared and is based on extensive tests.

Since manufacturer have no influence on installation and handling of apparatus, the company will not assume any responsibility for lack of success or for damages caused by the apparatus itself or by its use.

### **EG-Declaration of conformity** Council Directive 98/37/EG

Mantis ULV-Sprühgeräte GmbH, Vierlander Straße 11 a, 21502 Geesthacht declares under our sole responsibility that the following products are in conformity with the provisions of the following Council Directive: 98/37/EG

> MANKAR-P, MANKAR-110-P, MANKAR-110-GP, MANKAR-L, Typ MANKAR-110 SELECT EL

MANTRA, MINI-MANTRA / PLUS, MICRO-MANTRA, MICRO-VASO Typ

FLEXOMANT-1W, FLEXOMANT-2W, FLEXOMANT-3W, FLEXOMANT-4W, Typ FLEXOMANT-PLUS, VARIMANT-1, VARIMANT-2, VARIMANT-4 PLUS, VARIMANT-WINNER-TOP, VARIMANT-WINNER-UNO

Typ **MAFEX** 

**ROFA** Typ

> André Verder Managing Director

Geesthacht January 2008

(Place and date of signature)

(Name, title and signature)